

**Parking Distance Control with Parallel Parking Assistance (Park Assist)**


From January 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

**erWin**

Parking Aid Control Module, Data Bus on Board Diagnostic Interface, Parallel Parking Assistance Control Module

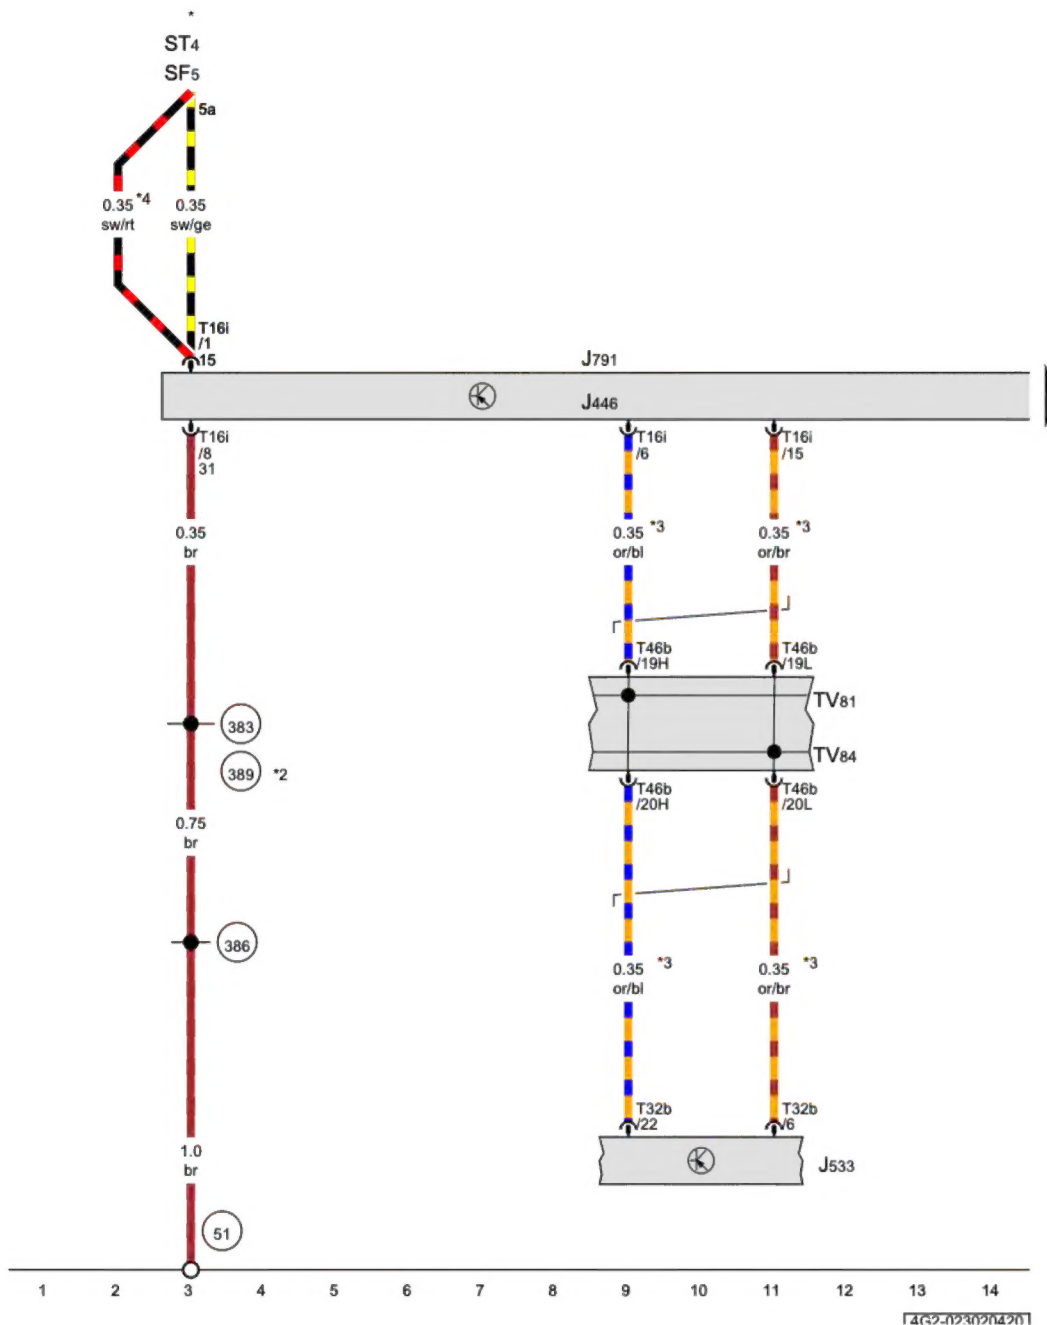


- J446 Parking Aid Control Module
- J533 Data Bus on Board Diagnostic Interface
- J791 Parallel Parking Assistance Control Module
- ST4 Fuse Panel 4
- SF5 Fuse 5 (On Fuse Panel F)
- T16i 16-Pin Connector
- T32b 32-Pin Connector
- T46b 46-Pin Connector
- TV81 Instrument Cluster CAN Bus High Wire Junction 2
- TV84 Instrument Cluster CAN Bus Low Wire Junction 2

- 51 Ground Connection in Luggage Compartment, Right
- 383 Ground Connection 18 (in Main Wiring Harness)
- 386 Ground Connection 21 (in Main Wiring Harness)
- 389 Ground Connection 24 (in Main Wiring Harness)

- \* Refer to Applicable Wiring Diagram for Fuse Positions
- \*2 Avant
- \*3 Data Bus Wire (CAN Bus)
- \*4 From June 2011

ws = white  
sw = black  
ro = red  
rt = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = lilac  
vi = lilac  
ge = yellow  
or = orange  
rs = pink


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the written authorization of AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

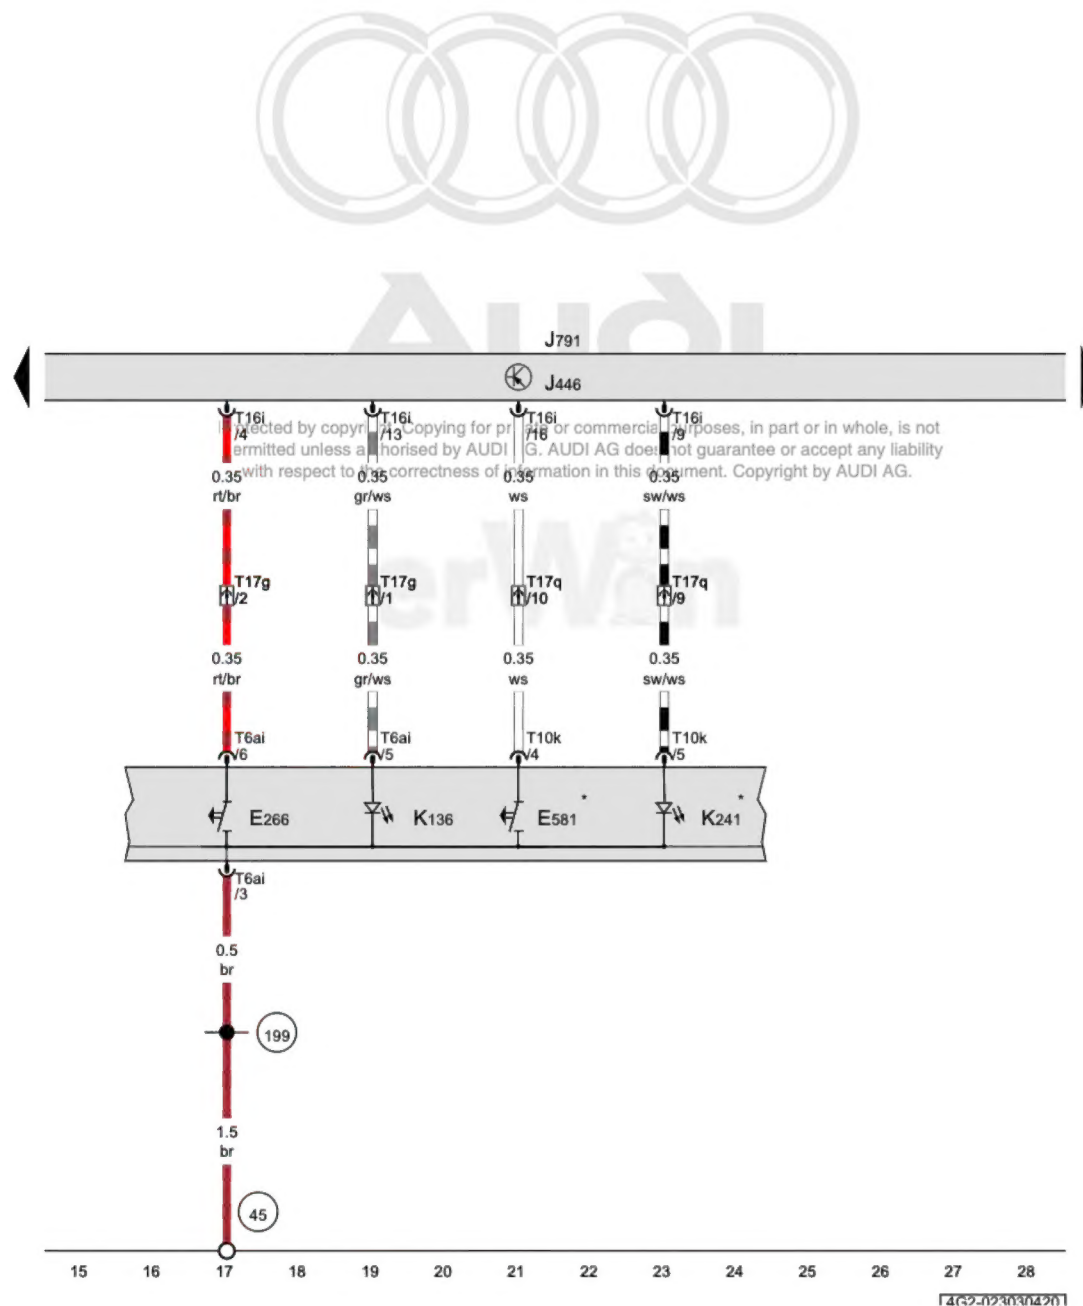

Parking Aid Button, Parallel Parking Assistance Button, Parking Aid Control Module, Parallel Parking Assistance Control Module, Parking Aid Indicator Lamp, Parallel Parking Assistance Indicator Lamp

- E266 Parking Aid Button
- E581 Parallel Parking Assistance Button
- J446 Parking Aid Control Module
- J791 Parallel Parking Assistance Control Module
- K136 Parking Aid Indicator Lamp
- K241 Parallel Parking Assistance Indicator Lamp
- T6ai 6-Pin Connector
- T10k 10-Pin Connector
- T16i 16-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- T17q 17-Pin Connector, In the Connector Station, Right A-Pillar
- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- \* For Vehicles with Parallel Parking Assistance

ws = white  
 sw = black  
 ro = red  
 rt = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 vi = lilac  
 ge = yellow  
 or = orange  
 rs = pink

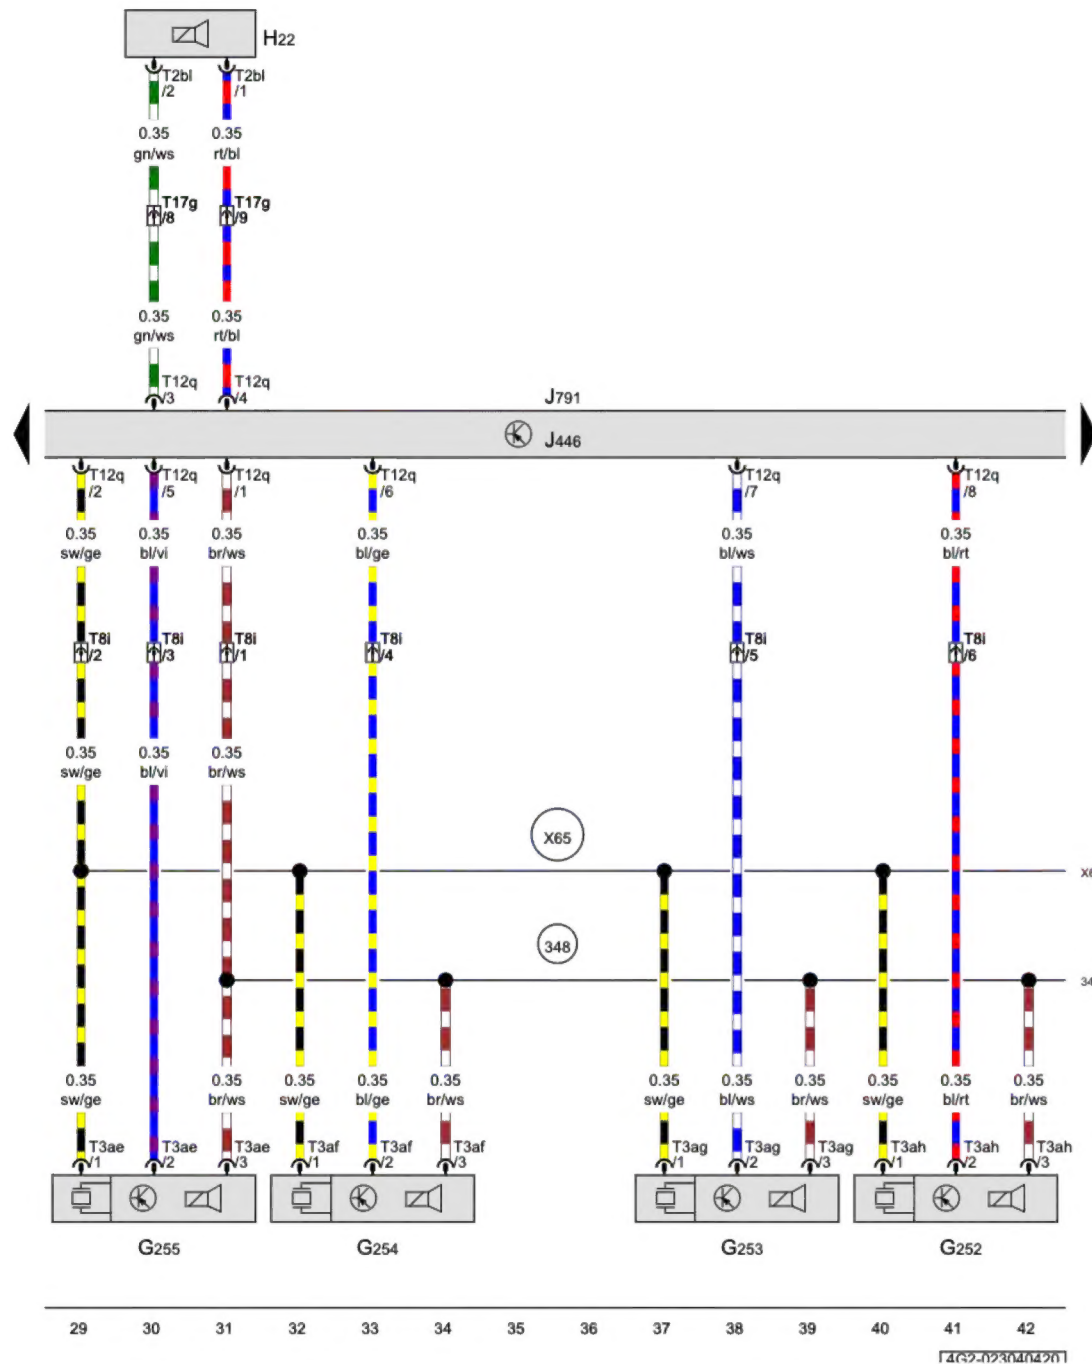

Right Front Parking Aid Sensor, Left Front Center Parking Aid Sensor, Left Front Parking Aid Sensor, Front Parking Aid Warning Buzzer, Parking Aid Control Module, Parallel Parking Assistance Control Module

- G252 Right Front Parking Aid Sensor
- G253 Right Front Center Parking Aid Sensor
- G254 Left Front Center Parking Aid Sensor
- G255 Left Front Parking Aid Sensor
- H22 Front Parking Aid Warning Buzzer
- J446 Parking Aid Control Module
- J791 Parallel Parking Assistance Control Module
- T2bl 2-Pin Connector
- T3ae 3-Pin Connector
- T3af 3-Pin Connector
- T3ag 3-Pin Connector
- T3ah 3-Pin Connector
- T8i 8-Pin Connector, Behind the Right Front Bumper
- T12q 12-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- 348 Parking Aid Ground Connection (in Front Bumper Wiring Harness)
- X65 Parking Aid Connection (in Front Bumper Wiring Harness)


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white  
 sw = black  
 ro = red  
 rt = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 vi = lilac  
 ge = yellow  
 or = orange  
 rs = pink


Left Front Parallel Parking Assistance Sensor, Left Rear Parallel Parking Assistance Sensor, Parking Aid Control Module, Parallel Parking Assistance Control Module

- G568 Left Front Parallel Parking Assistance Sensor
- G569 Right Front Parallel Parking Assistance Sensor
- G716 Left Rear Parallel Parking Assistance Sensor
- G717 Right Rear Parallel Parking Assistance Sensor
- J446 Parking Aid Control Module
- J791 Parallel Parking Assistance Control Module
- T3ai 3-Pin Connector
- T3ak 3-Pin Connector
- T3ap 3-Pin Connector
- T3aq 3-Pin Connector
- T8i 8-Pin Connector, Behind the Right Front Bumper
- T12q 12-Pin Connector
- T12w 12-Pin Connector

- 348 Parking Aid Ground Connection (in Front Bumper Wiring Harness)
- 352 Parking Aid Ground Connection (in Rear Bumper Wiring Harness)
- X65 Parking Aid Connection (in Front Bumper Wiring Harness)
- X68 Parking Aid Connection (in Rear Bumper Wiring Harness)
- \* For Vehicles with Parallel Parking Assistance

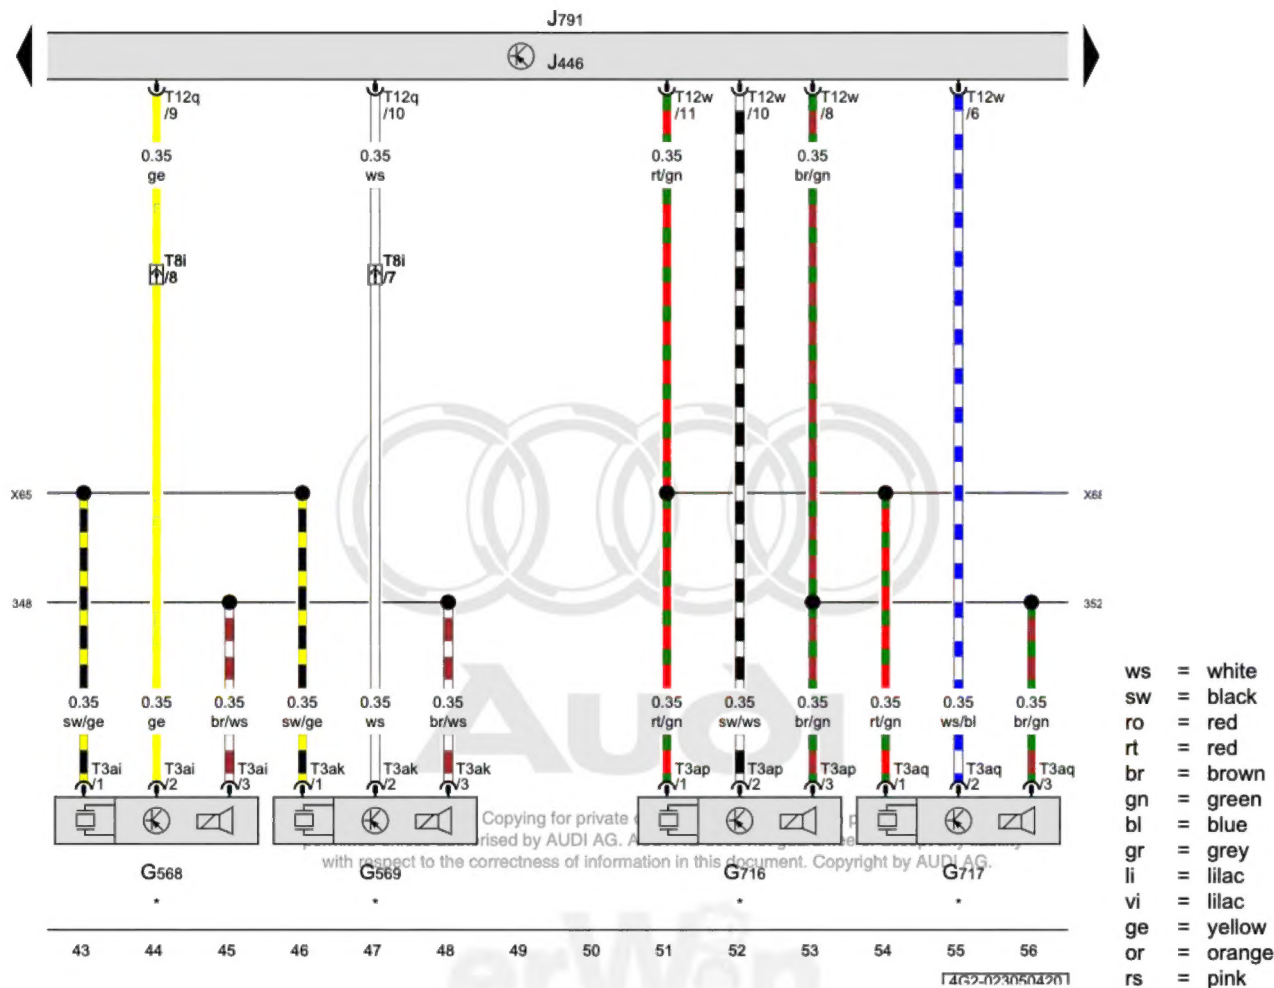



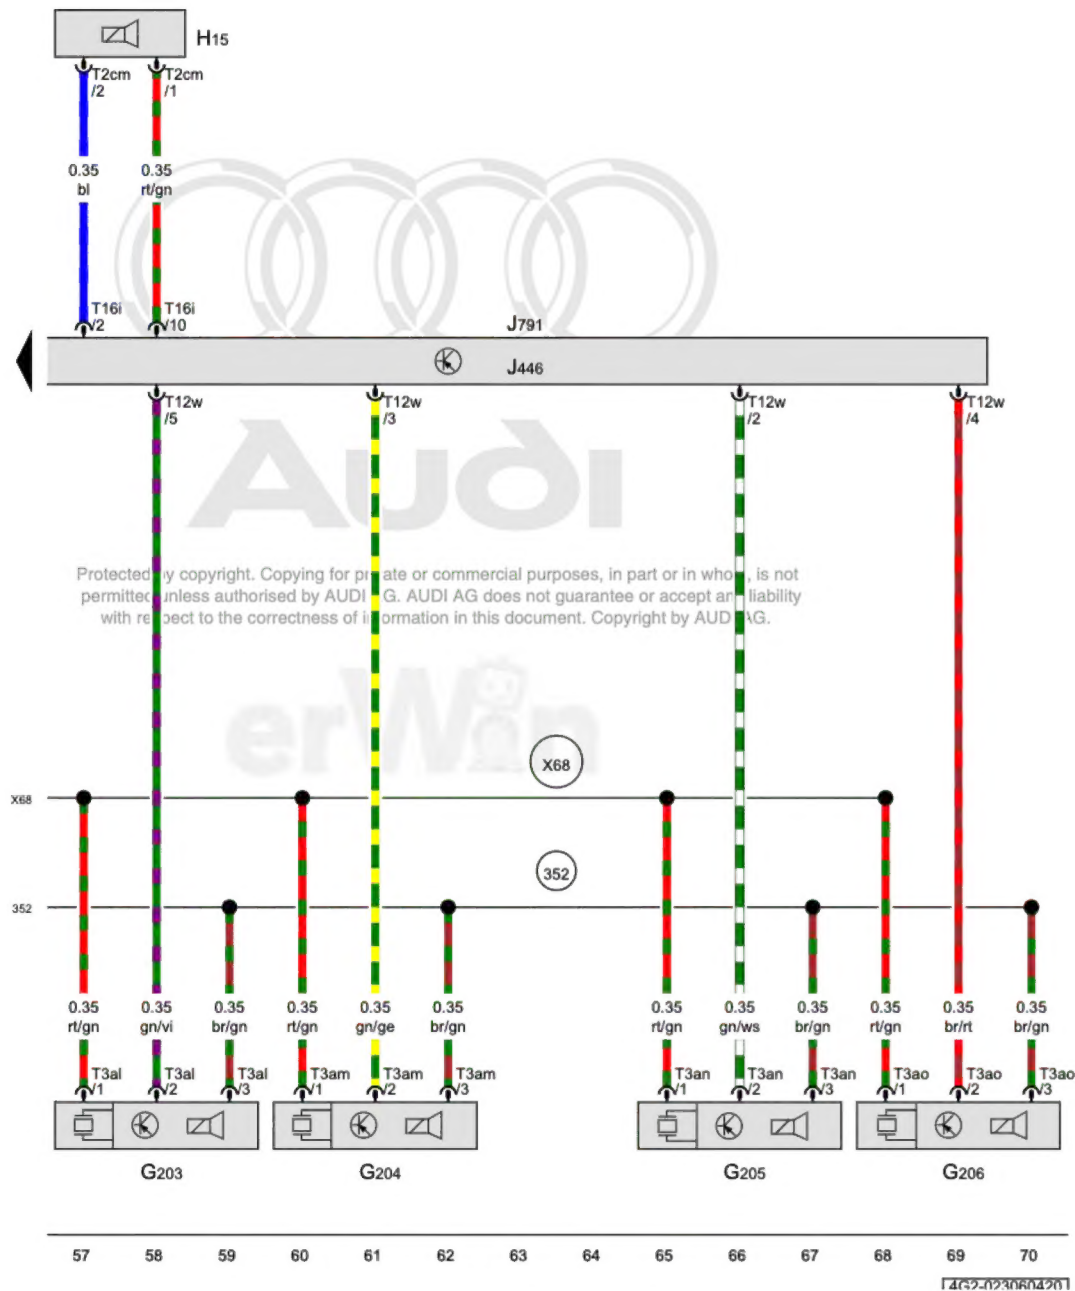

Left Rear Center Parking Aid Sensor, Right Rear Parking Aid Sensor, Rear Parking Aid Warning Buzzer, Parking Aid Control Module, Parallel Parking Assistance Control Module

- G203 Left Rear Parking Aid Sensor
- G204 Left Rear Center Parking Aid Sensor
- G205 Right Rear Center Parking Aid Sensor
- G206 Right Rear Parking Aid Sensor
- H15 Rear Parking Aid Warning Buzzer
- J446 Parking Aid Control Module
- J791 Parallel Parking Assistance Control Module
- T2cm 2-Pin Connector
- T3al 3-Pin Connector
- T3am 3-Pin Connector
- T3an 3-Pin Connector
- T3ao 3-Pin Connector
- T12w 12-Pin Connector
- T16i 16-Pin Connector

- (352) Parking Aid Ground Connection (in Rear Bumper Wiring Harness)
- (X68) Parking Aid Connection (in Rear Bumper Wiring Harness)